

PRIORITY ZONE MIXER CONTROLLER NUMBER FAQ

Refers to Controller Numbers of the following Jupiter Apps:

Priority Zone Mixer #1 J4

Priority Zone Mixer #1 J8

Priority Zone Mixer #1 J12

Priority Zone Mixer #2 J8

Priority Zone Mixer #2 J12

Control Parameters:

The BGM Assign Radio Buttons values.

Description:

The left/right input channels are swapped for the right channel so control values can be the same for each side of the left/right pairs. For zones 1, 3, 5, and 7, the values to use are in ascending order. For zones 2, 4, 6, and 8, the even/odd values will need to be swapped.

Here are the appropriate values:

Zone 1:

To select BGM 3: CS 7113 11915

To select BGM 4: CS 7113 17873

To select BGM 5: CS 7113 23831

To select BGM 6: CS 7113 29789

To select BGM 7: CS 7113 35746

To select BGM 8: CS 7113 41704

Zones 3, 5, 7: same as above except substitute 7413, 7713, and 8313 for 7113 respectively.

Zone 2 (note reversed values):

To select BGM 3: CS 7213 17873

To select BGM 4: CS 7213 11915

To select BGM 5: CS 7213 29789

To select BGM 6: CS 7213 23831

To select BGM 7: CS 7213 41704

To select BGM 8: CS 7213 35746

Zones 4, 6, 8: same as above except substitute 7513, 7813, and 8413 for 7213 respectively.

